



USE INSTRUCTIONS | JACK POSITION PADS



THIS PAGE LEFT INTENTIONALLY BLANK



From all of the asses at Angry Ass, thanks for purchasing Angry Ass Jack Position Pads for your BMW!

Please read this entire use manual prior to attempting to use the Angry Ass Jack Position Pads to ensure proper installation and safe use.

The Angry Ass Jack Position Pads should only be installed and/or used by persons skilled in vehicle component installation and maintenance procedures. Angry Ass Limited shall not be held liable for any damage or personal injury (including direct, indirect, or consequential damage) sustained as a result of installation of the Angry Ass Jack Position Pads or its use and maintenance. Use at your own risk.

If you have any questions regarding the installation and/or proper use of the Angry Ass Jack Position Pads, or this manual, please contact Angry Ass via our official website at: www.Angry-Ass.com.

All statements made are made in respect to the Angry Ass Jack Position Pads being used "as is". Any modifications to the Angry Ass Jack Position Pads or its improper installation, use or maintenance that is not in accordance with this installation manual, may result in severe damage to the chassis and/or vehicle as a whole, as well as personal injury. Angry Ass Limited reminds you to be responsible and stay safe!!

Thanks again for choosing Angry Ass!



USE AND PRECAUTIONS

1. Inspect the Jack Position Pads for damage or cracking, some minor compression and settling of the material is to be expected.
2. **DO NOT** use the Jack Position Pads for single point lifting with a jack! There is a risk of the jack and puck slipping as the car lifts!
3. Chock all 4 wheels before jacking/lifting.
4. Ensure vehicle is in gear/park and parking brake engaged if available/functional.
5. If using pads with a vehicle lift ensure the Jack Position Pad is centered on your lift arm pad.
6. If using the pads with jack stands make sure the jack stands have a flat top that is suitable for the full diameter of the Jack Position Pads and that the Jack Position Pad is centered on your jack stand.
7. **CHECK STABILITY** of your lifted vehicle before working under it!
8. If you have any questions or concerns, please reach out to us at info@angry-ass.com



NOTES