# Angry Ass 340x30 4 Piston Front Brake System | Road

Version 1.1

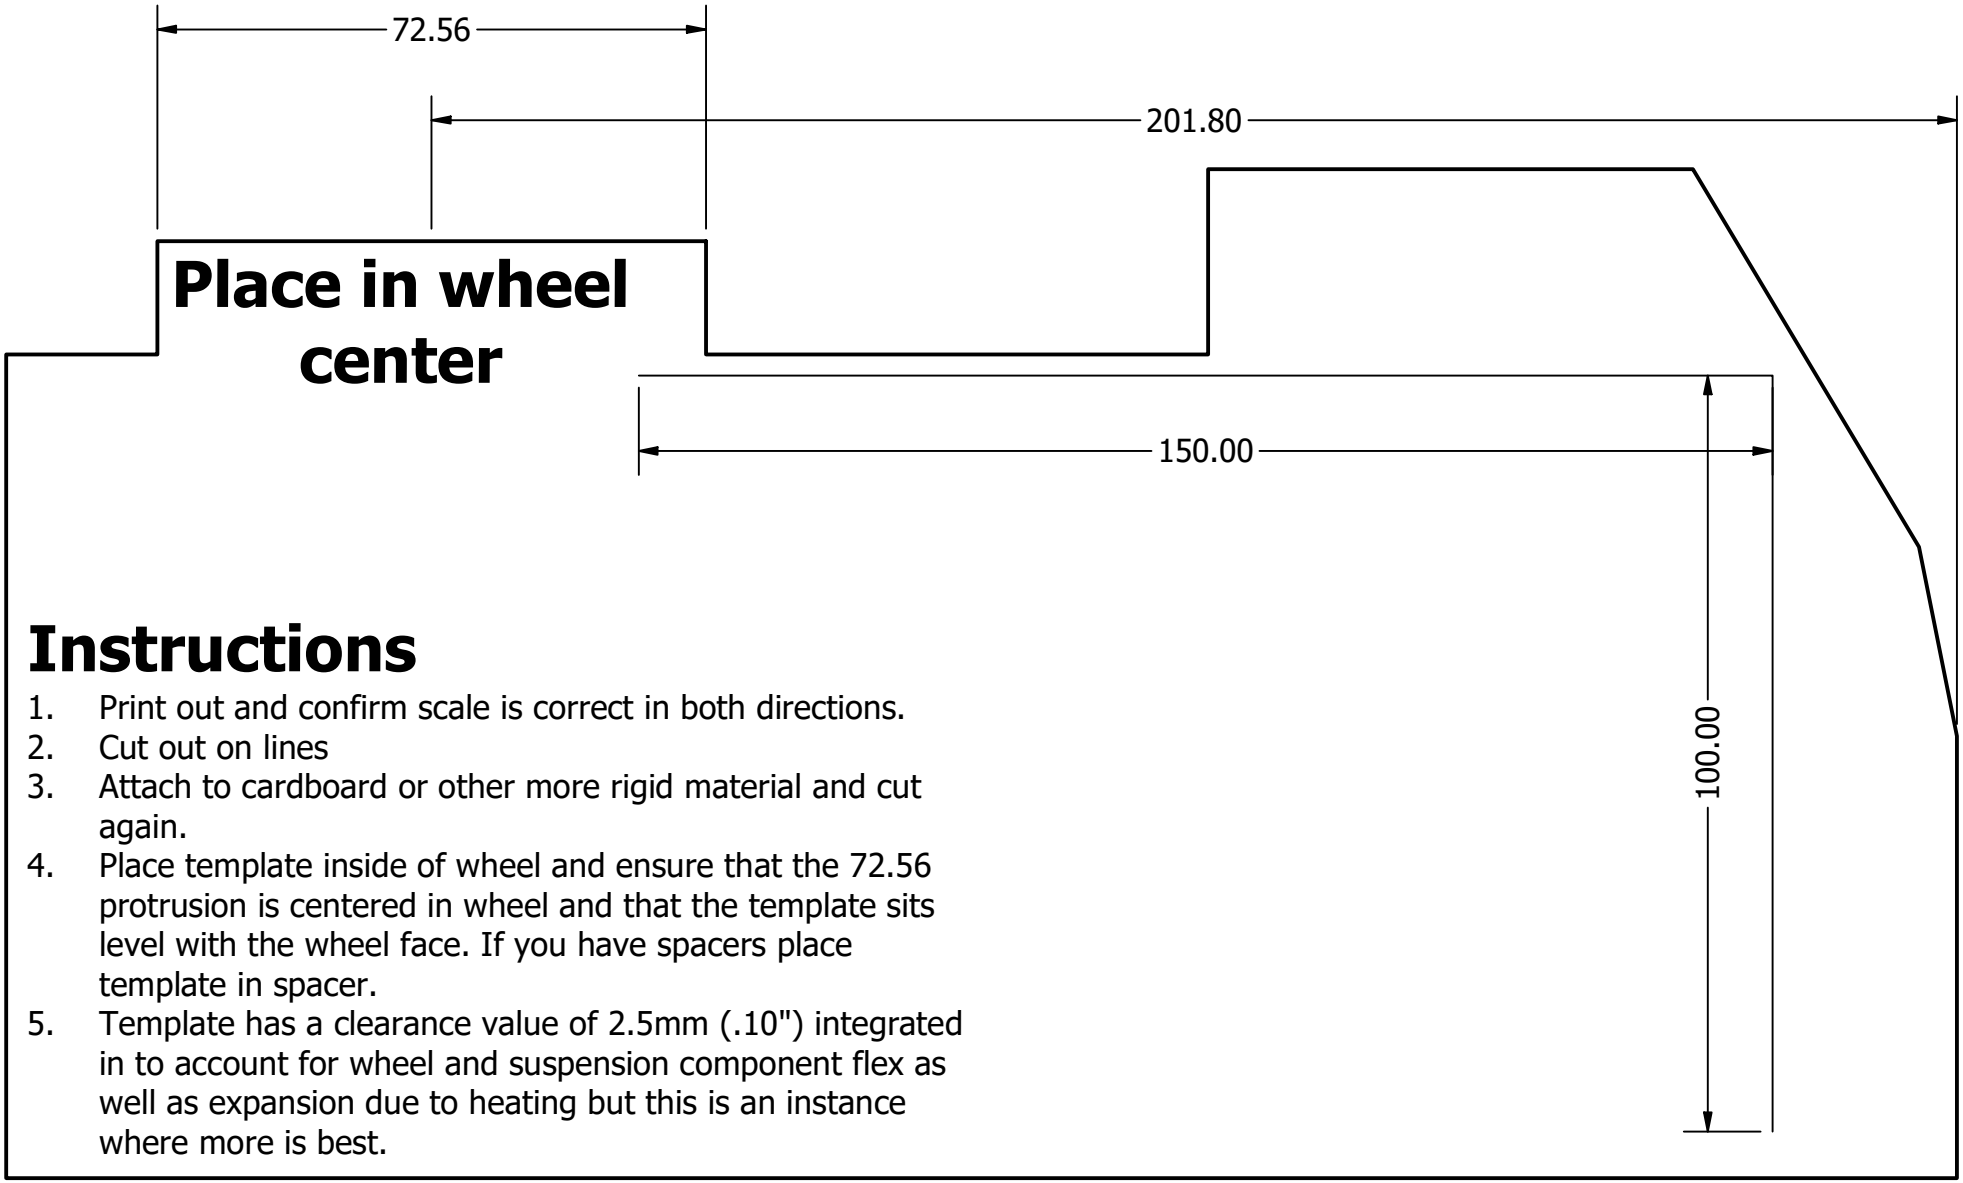


## Instructions

1. Print out and confirm scale is correct in both directions.
2. Cut out on lines
3. Attach to cardboard or other more rigid material and cut again.
4. Place template inside of wheel and ensure that the 72.56 protrusion is centered in wheel and that the template sits level with the wheel face. If you have spacers place template in spacer.
5. Template has a clearance value of 2.5mm (.10") integrated in to account for wheel and suspension component flex as well as expansion due to heating but this is an instance where more is best.